NOTE: Please read all instructions carefully before using this product

Table of Contents

Safety Notice

Hardware Identifier

Assembly Instruction

Parts List

Warranty


Ordering Parts

Model WM-354

Retain This Manual for Reference

05-27-03

OWNER'S MANUAL

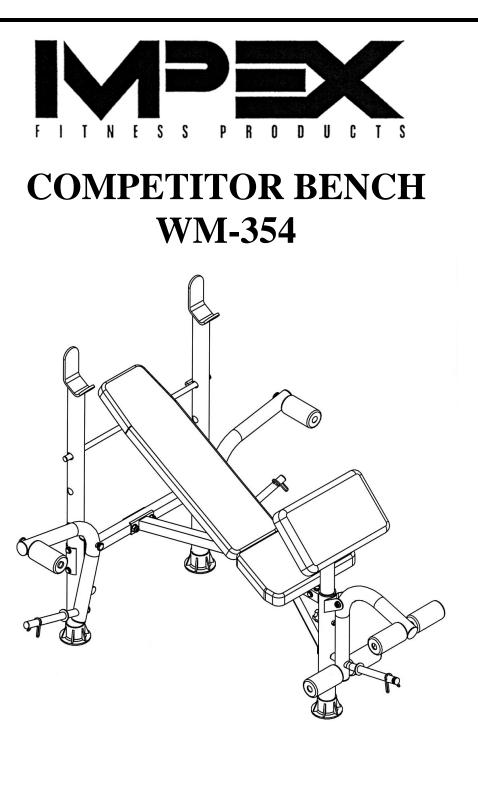

IMPEX FITNESS PRODUCTS 14777 DON JULIAN RD., CITY OF INDUSTRY, CA 91746

Tel: (800) 999-8899 Fax: (626) 961-9966

www.impex-fitness.com info@impex-fitness.com

TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	
HARDWARE IDENTIFIER	
ASSEMBLY INSTRUCTIONS	4
EXPLODED DIAGRAM	9
PARTS LIST	10
WARRANTY	11
ORDERING PARTS	11

BEFORE YOU BEGIN

Thank you for selecting the COMPETITOR WM-354 Bench by IMPEX FITNESS PRODUCTS. For your safety and benefit, read this manual carefully before using the machine. As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, we guarantee you complete satisfaction through direct assistance from our factory. To avoid unnecessary delays, *please call our TOLL-FREE customer service number*. Our Customer Service Agents will provide immediate assistance to you.

Toll-Free Customer Service Number 1-800-999-8899 Mon. - Fri. 9 a.m. - 5 p.m. PST www.impex-fitness.com info@impex-fitness.com

IMPORTANT SAFETY NOTICE

PRECAUTIONS


This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:

- 1. Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine.
- 2. Only one person at a time should use the machine.
- 3. If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- 4. Position the machine on a clear, leveled surface. DO NOT use the machine near water or outdoors.
- 5. Keep hands away from all moving parts.
- 6. Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
- 7. Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- 8. Do not place any sharp object around the machine.
- 9. Disabled person should not use the machine without a qualified person or physician in attendance.
- 10. Before using the machine to exercise, always do stretching exercises to properly warm up.
- 11. Never operate the machine if the machine is not functioning properly.
- 12. A spotter is recommended during exercise.

WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. IMPEX INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.

SAVE THESE INSTRUCTIONS.

HARDWARE IDENTIFIER

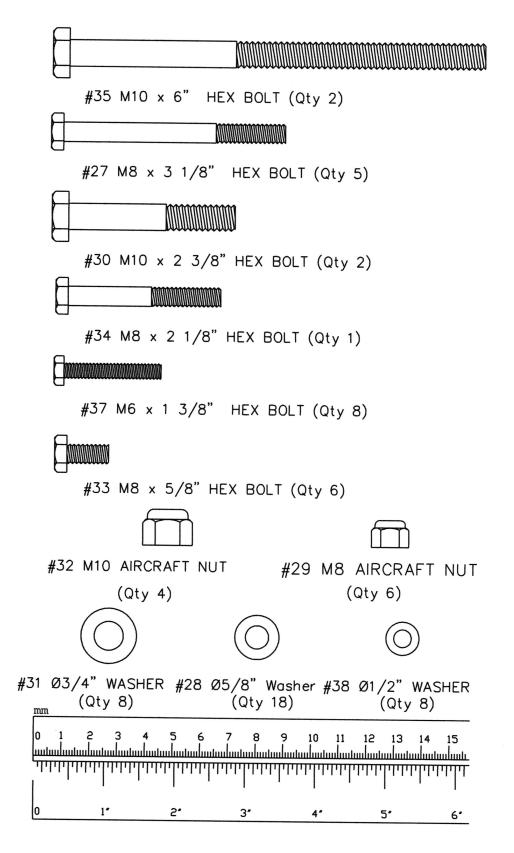

ASSEMBLY INSTRUCTION


Tools Required Assembling the Machine: Two Adjustable Wrenches

NOTE: It is strongly recommended two or more people assembling this machine to avoid possible injury.

STEP 1 (See Diagram 1)

- A.) Plug the two Stabilizer End Caps (#24) onto the bottom of the two Rear Upright Beams (#1).
- B.) Connect the two Rear Upright Beams by a Cross Brace (#2) in the Mid-span. Secure them with two M8 x 3 1/8" Hex Bolts (#27), four Ø 5/8" Washers (#28), one Curved Bracket (#3), and two M8 Aircraft Nuts (#29) on each end of the Cross Brace.
- C.) Insert the Backrest Adjustment Bar (#4) through a selected hole to obtain desired incline of Backrest.


Diagram 1

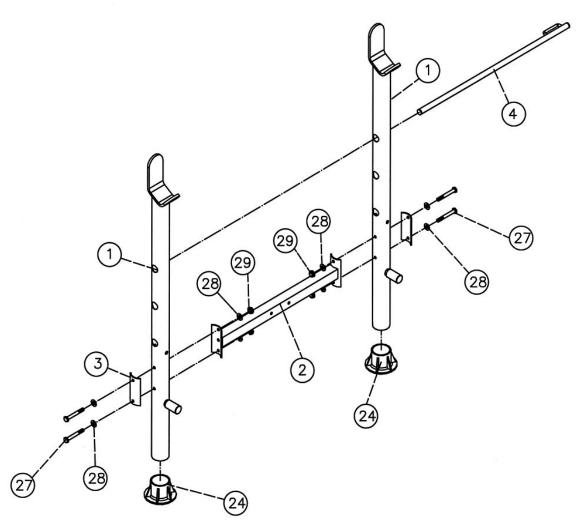

STEP 2 (See Diagram 2)


- A.) Plug a Stabilizer End Cap (#24) onto the bottom of Front Leg (#8). Attach the Front Leg to the Main Seat Support (#6). Secure it with three M8 x 5/8" Hex Bolts (#33) and Ø 5/8" Washers (#28). DO NOT tighten the Bolts yet.
- B.) Attach the Main Seat Support (#6) to the Cross Brace (#2). Secure it with two M10 x 2 3/8" Hex Bolts (#30), four Ø ³/₄" Washers (#31), one Flat Bracket (#5), and two M10 Aircraft Nuts (#32).
- C.) Attach one end of Diagonal Support (#7) to the Main Seat Support (#6). Secure it with one M8 x 2 1/8" Hex Bolt (#34), two Ø 5/8" Washers (#28), and one M8 Aircraft Nut (#29). Attach the other end of Diagonal Support to the Front Leg (#8). Secure it with one M8 x 5/8" Hex Bolt (#33) and Ø 5/8" Washer (#28).
- D.) Securely tighten all Bolts and Nuts.

DIAGRAM 2

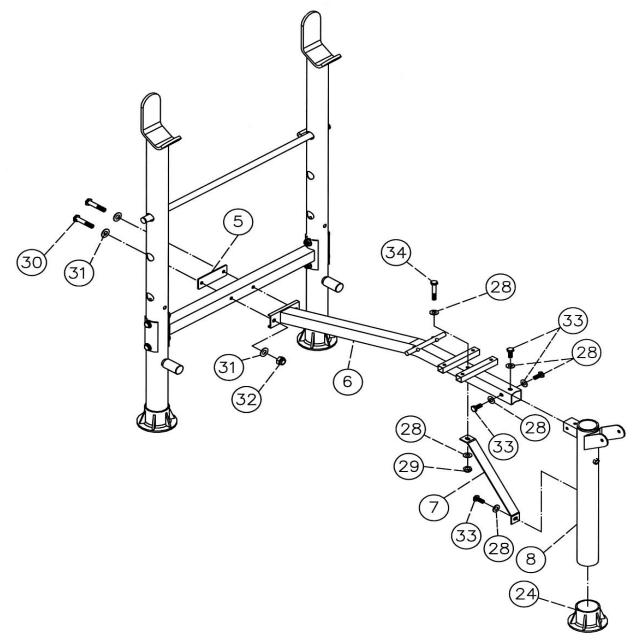

STEP 3 (See Diagram 3)


- A.) Attach one \emptyset 3/4" Washer (#31) onto a M10 x 6" Hex Bolt (#35). Insert the Bolt through the Butterfly (#9). Secure the Bolt with one M10 x 5/8" Regular Nut (#36)
- B.) Insert the Bolt through the Rear Upright Beam (#1). Secure it with a Ø ¾" Washer (#31) and M10 Aircraft Nut (#32). DO NOT over tighten the Bolt. Make sure the Butterfly is able to swivel on the Upright Beam.
- C.) Insert a Butterfly Foam Tube (#10) through the hole on the Butterfly. Push a Foam Roll (#20) onto the Tube. Place a Spring Clip (#23) onto the weight post on the Butterfly.
- D.) Repeat above procedures A, B and C to install the other side.
- E.) Attach the Leg Developer (#11) to the Front Leg (#8). Secure it with one M8 x 3 1/8" Hex Bolt (#27), two Ø 5/8" Washers (#28), and one M8 Aircraft Nut (#29).
- F.) Insert two Foam Tubes (#12) halfway through the holes on the Leg Developer. Push four Foam Rolls (#20) onto the Tubes from both sides.
- G.) Place a Spring Clip (#23) onto the weight post on the Leg Developer.

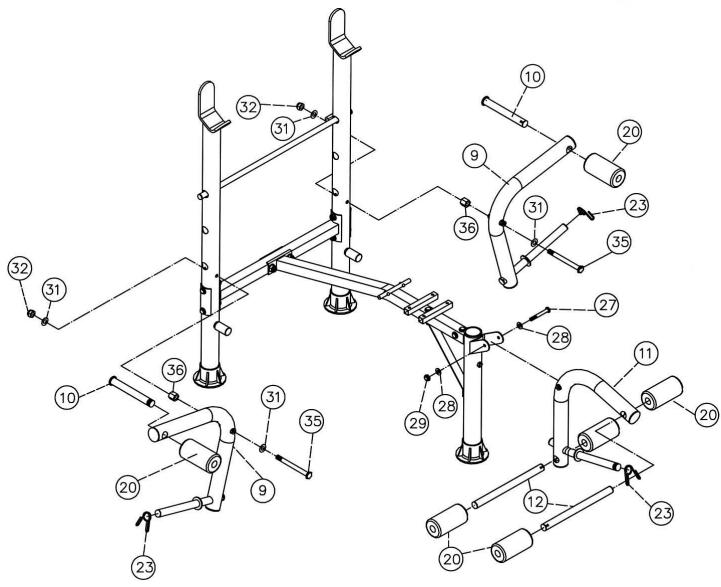

STEP 4 (See Diagram 4)

- A.) Attach the hole-side of the Backrest Supports (#14) onto both ends of the pivot on the Main Seat Support (#6). Place the other end rest against the Backrest Adjustment Bar (#4).
- B.) Place the Backrest Board (#15) onto the Backrest Supports. Secure it with four M6 x 1 3/8" Hex Bolts (#37) and Ø $\frac{1}{2}$ " Washers (#38).
- C.) Place the Seat Pad (#16) onto the Main Seat Support. Secure it with four M6 x 1 3/8" Hex Bolts (#37) and $\emptyset \frac{1}{2}$ " Washers (#38).


DIAGRAM 4

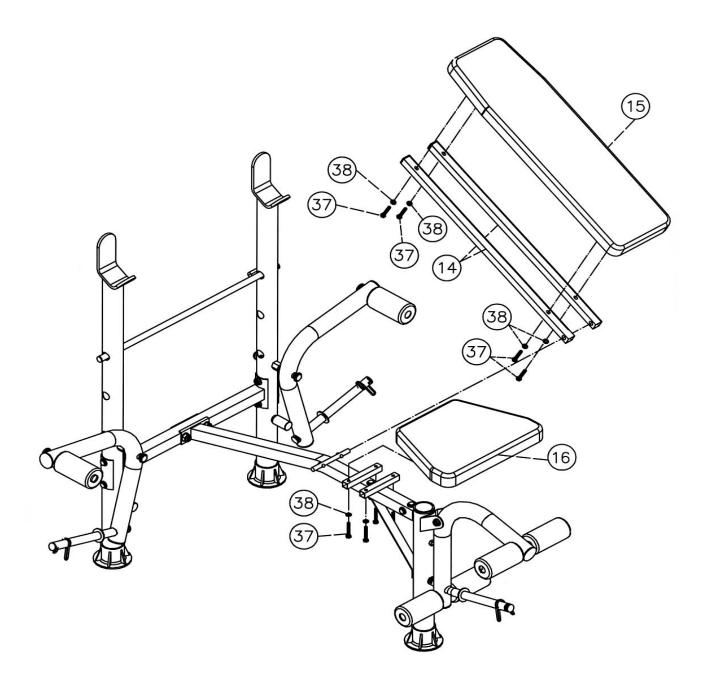


STEP 5 (See Diagram 5)

- A.) Attach the Arm Curl Pad (#17) to the Arm Curl Stand (#13). Secure it with two M8 x 5/8" Hex Bolts (#33) and Ø 5/8" Washers (#28).
- B.) Insert the Arm Curl Stand into the top opening on the Front Leg. Secure it with a Lock Knob (#25).

DIAGRAM 5

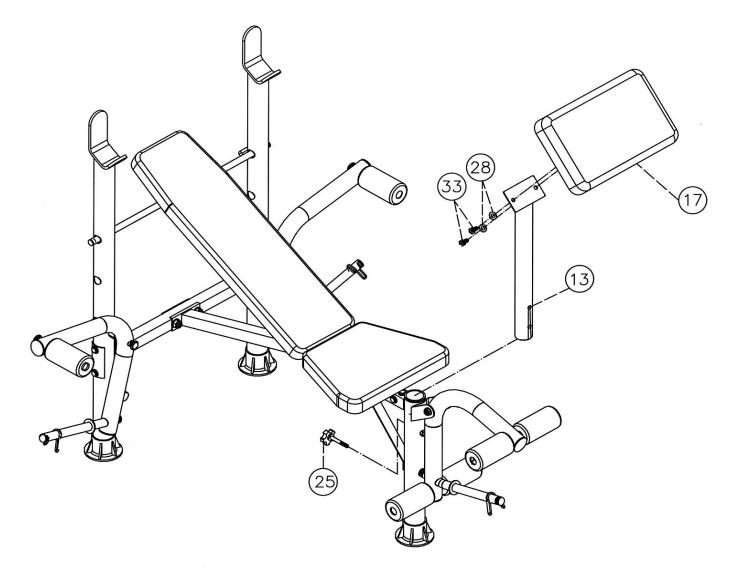

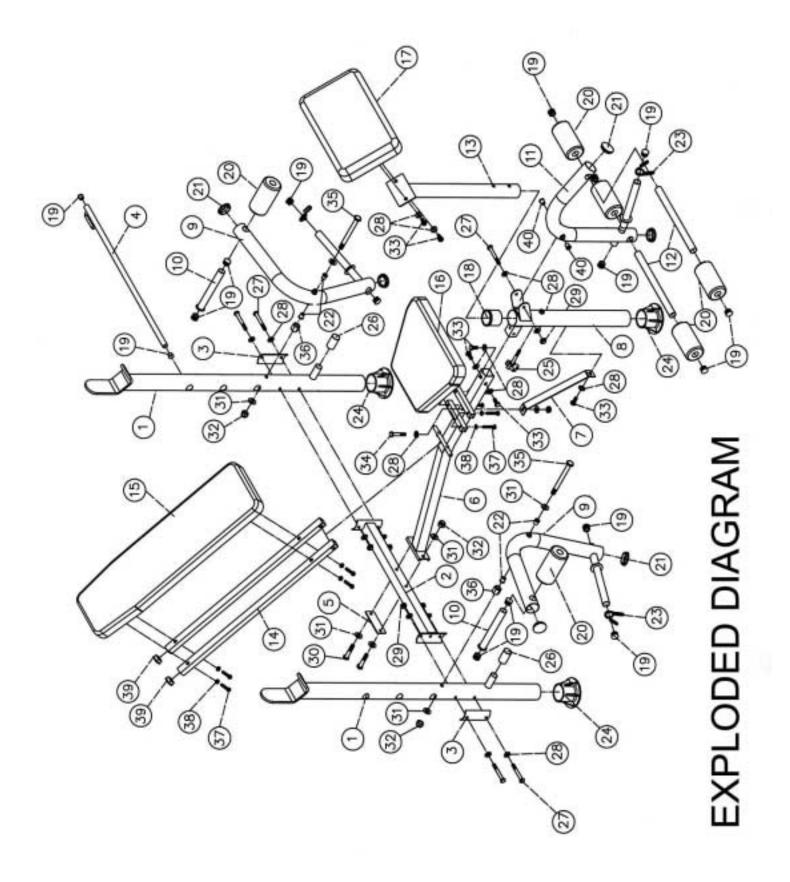

PARTS LIST

KEY NO.	DESCRIPTION	QUANTITY
1	Rear Upright Beam	2
2	Cross Brace	1
3	Curved Bracket	2
4	Backrest Adjustment Bar	1
5	Flat Bracket	1
6	Main Seat Support	1
7	Diagonal Support	1
8	Front Leg	1
9	Butterfly	2
10	Butterfly Foam Tube	2
11	Leg Developer	1
12	Foam Tube	2
13	Arm Curl Stand	1
14	Backrest Support	2
15	Backrest Board	1
16	Seat Pad	1
17	Arm Curl Pad	1
18	Round Sleeve	1
19	1" Round End Cap	16
20	Foam Roll	6
21	2" Round End Cap	6
22	Bushing	4
23	Spring Clip	3
24	Stabilizer End Cap	3
25	Lock Knob	1
26	1" Butterfly Bumper	2
27	M8 x 3 1/8" Hex Bolt	5
28	Ø 5/8" Washer	18
29	M8 Aircraft Nut	6
30	M10 x 2 3/8" Hex Bolt	2
31	Ø ¾" Washer	8
32	M10 Aircraft Nut	4
33	M8 x 5/8" Hex Bolt	6
34	M8 x 2 1/8" Hex Bolt	1
35	M10 x 6" Hex Bolt	2
36	M10 x 5/8" Regular Nut	2
37	M6 x 1 3/8" Hex Bolt	8
38	Ø ½" Washer	8
39	1" Square End Cap	2
40	Leg Developer Bushing	2

IMPEX INC.

LIMITED WARRANTY

IMPEX Inc. ("IMPEX") warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years on the Frame from the date of purchase. This warranty extends only to the original purchaser. IMPEX's obligation under this Warranty is limited to replacing or repairing, at IMPEX's option.

All returns must be pre-authorized by IMPEX. Pre-authorization may be obtained by calling IMPEX Customer Service Department at 1-800-999-8899. All freights for products return to IMPEX must be prepaid by the customer. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an IMPEX authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by IMPEX.

IMPEX is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal right. You may also have other rights which vary from state to state. Register on-line www.impex-fitness.com

IMPEX INC. 14777 Don Julian City of Industry, CA 91746

ORDERING REPLACEMENT PARTS

Replacement parts can be ordered by calling our Customer Service Department toll-free at **1-800-999-8899** during our regular business hours: Monday through Friday, 9 am until 5 pm Pacific standard time. **info@impex-fitness.com**

When ordering replacement parts, always give the following information.

- 1. Model
- 2. Description of Parts
- 3. Part Number
- 4. Date of Purchase